



## Sleeping Child Check Operation Procedure SCC-AM

- **With the vehicle ignition on, the system will arm when the SCC-AM sees a 12V signal typically coming from red or amber warning lights or a stop arm. Other vehicles may have different arming criteria depending on the wiring.**
- **When the system has been armed and the ignition is turned off, overhead dome lights will turn on and stay on as an additional reminder to check the bus.**
- **The SCC-AM stays armed until ignition is switched off and deactivation switch in rear of bus is pressed. Doors should be/remain closed until system is deactivated. Opening doors before disarmed will cause alarm to sound. The SCC-AM can only be deactivated if the doors are closed.**
- **After depressing rear deactivation switch, the dome lights will blink confirming the system has been disarmed. Doors can be opened and the driver can exit the vehicle.**